

# **Previous RM-W Firmware**

## **version information**

### **V1.9.3**

#### **New Functions**

**[RM-WOM / RM-WDR / RM-WGL / RM-WGS]**

- Low latency mode can now be selected for RM-WOM/WDR, in addition to RM-WGL/WGS.

#### **Fixed Bugs**

**[RM-WAP-8]**

- Fixed the issue where the allowable number of additional microphones could not be estimated correctly when performing a site survey with DECT Synchronization turned on.

**[RM-WOM / RM-WDR / RM-WGL / RM-WGS]**

- Fixed the issue where the indicator goes off when the microphone is placed on the charger, even with the microphone Start mode set to Standby.
- Fixed other small issues.

#### **Improvements**

**[RM-WOM / RM-WDR / RM-WGL / RM-WGS]**

- For improved usability, the LED no longer goes off during charging as a result of the low remaining battery level.

## **V1.8.3**

### **Fixed Bug**

- Solved a problem that the microphone's battery might not be recharged when the battery power is low.
- Solved a problem that the microphone might stop charging when its battery is charging via the USB interface.